

::: ACRONAME

Quick Start Guide USBHub3c



Happy?

We want to hear from you!



Write a review to share:

acroname.com/review-hub3c

Email: sales@acroname.com

Call: 720-564-0373



Questions?

We are ready to help.

Want to discuss an
advanced application?

Email: support@acroname.com

Call: 720-564-0373


Getting Started

- 1 Download** the latest BrainStem Development Kit (BDK) from: acroname.com/software
Windows 7 users, see the BrainStem driver install instructions in the drivers folder
- 2 Connect power** to PowerC using the included PD power adapter
- 3 Connect USB** from a host PC or Mac to Port 0 using the included USB cable
- 4 Open** the BDK download and run **StemTool** GUI from the bin folder to start controlling your hub

1



acroname.com/software

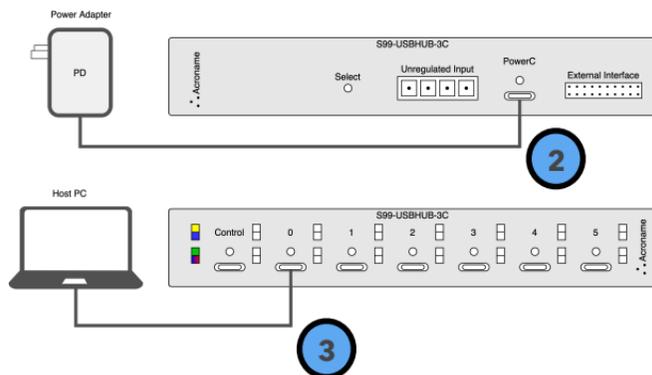

4

